

SPARE PARTS LIST

MODEL NO. BTM50

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	266429-2	TAPPING SCREW 3X16	4	
002	187346-2	HEAD COVER SET INC. 7	1	
003	*****	*****	***	*****
004	424511-5	CRANK HOUSING CAP B	1	
005	424510-7	CRANK HOUSING CAP A	1	
006	266374-1	TAPPING SCREW 4X25	4	
007	187346-2	HEAD COVER SET INC. 2	1	
008	266783-4	HEX.SOCKET C.S.H.SCREW M6X20	1	
009	224455-7	OUTER FLANGE 22	1	
010	213021-5	O RING 5	1	
011	213479-8	O RING 33	1	
012	326187-3	BEARING BOX	1	
013	961003-8	RETAINING RING S-7	1	
014	211392-4	SPHERE BEARING 706	1	
015	326186-5	CRANK SHAFT	1	
016	210059-1	BALL BEARING 6000DDW	1	
017	285856-4	BEARING RETAINER	1	
018	922117-8	HEX. SOCKET HEAD BOLT M4X12	3	
019	620146-2	LED CIRCUIT	1	
020	453761-5	SWITCH KNOB	1	
021	453755-0	MOTOR HOUSING	1	
022	911516-9	PAN HEAD SCREW M4X12	2	
023	453762-3	HOUSING COVER	1	
024	213030-4	O RING 8	1	
025	629956-4	DC MOTOR	1	
026	424520-4	CAP	1	
027	234263-8	COMPRESSION SPRING 5	1	
028	233002-3	COMPRESSION SPRING 3	1	
029	255058-6	RIVET 2	1	
030	453757-6	SWITCH LEVER	1	
031	453760-7	SWITCH CASE	1	
032	632A03-8	CONTROLLER UNIT	1	
033	263036-2	RUBBER PIN 5	1	
034	268184-2	PIN 1.5	1	
035	424473-7	CUSHION RUBBER	1	
036	*****	*****	***	*****
037	266326-2	TAPPING SCREW 4X18	2	
038	424026-2	CUSHION	1	
039	*****	*****	***	*****
040	453756-8	HANDLE COVER	1	
041	271617-8	DIAL 28	1	
042	651423-1	SWITCH	1	
043	424473-7	CUSHION RUBBER	1	
044	*****	*****	***	*****
045	897390-8	BTM50 NAME PLATE	1	
046	266429-2	TAPPING SCREW 3X16	4	
A01	783233-9	HEX. WRENCH 5	1	
A02	***DC18RC	DC18RC FAST CHARGER	1	
A03	194204-5	BATTERY BL1830 SET	2	
A04	450128-8	BATTERY COVER	1	
A05	141562-0	PLASTIC CASE COMPLETE	1	
A06	800B94-5	BTM50RFE PLASTIC CASE LABEL	2	

SERVICE DRAWING

MODEL NO. BTM50

